


Wall Tattoo Installation Instructions

To prepare your surface, wipe the area down with a DRY cloth to be sure there is no dust. Do not use a wet cloth.


Do not use on freshly painted walls. Allow 30 days for freshly painted walls to dry.

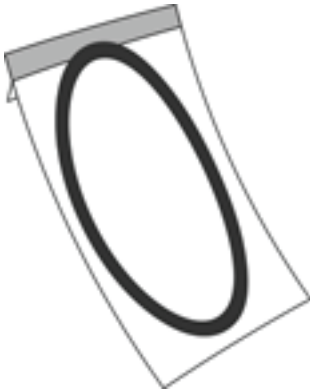

1. Pull Back 4-6 Inches

Fold the white backing paper back about 4-6 inches from the top of the tattoo. Use the revealed sticky area to position and hold your tattoo on the wall. Press this area down firmly with the included application squeegee.


Tip: If your tattoo design is wider than it is tall, follow these instructions starting with a side, rather than the top.

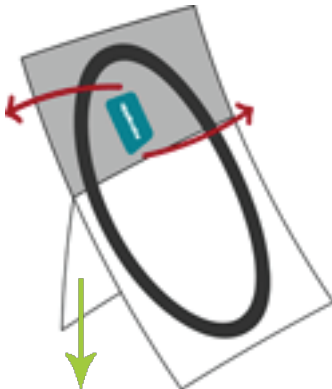

2. Press Side to Side

Once your tattoo is in place, use the squeegee to press the tattoo onto the wall in a side to side manner to prevent air bubbles. Begin in the middle and press out to the edges. Remove the remaining white backing paper as you apply the tattoo.

Tip: A 2nd person can help remove the backing paper as the 1st squeegees down the tattoo.

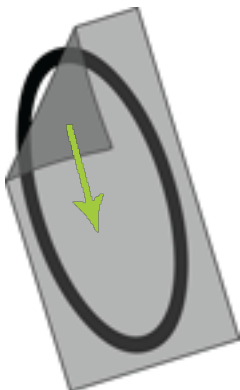

3. Peel Straight Back

Go over the design with your squeegee firmly to ensure the design has adhered. Pull up a corner of the application paper and peel it slowly, straight down along the wall to reveal your tattoo.

Tip: If a piece of your tattoo lifts off the wall as you remove the application paper, stop and re-apply the lifted piece with the squeegee. Then continue to peel back the application paper.